

# QUICK START GUIDE

## BLAXTAIR ORIGIN®

MR120



MR120A



Blaxtair  
Documentation


1

**10 – 32 Volts max**


Configuration  
550421  
Enter a password

1	2	3
4	5	6
7	8	9
0		

2

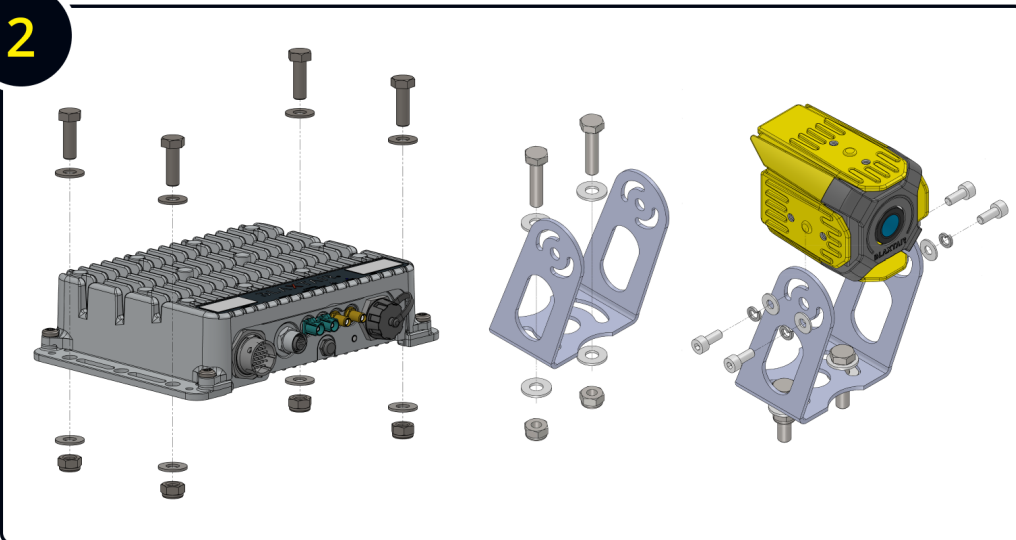

3

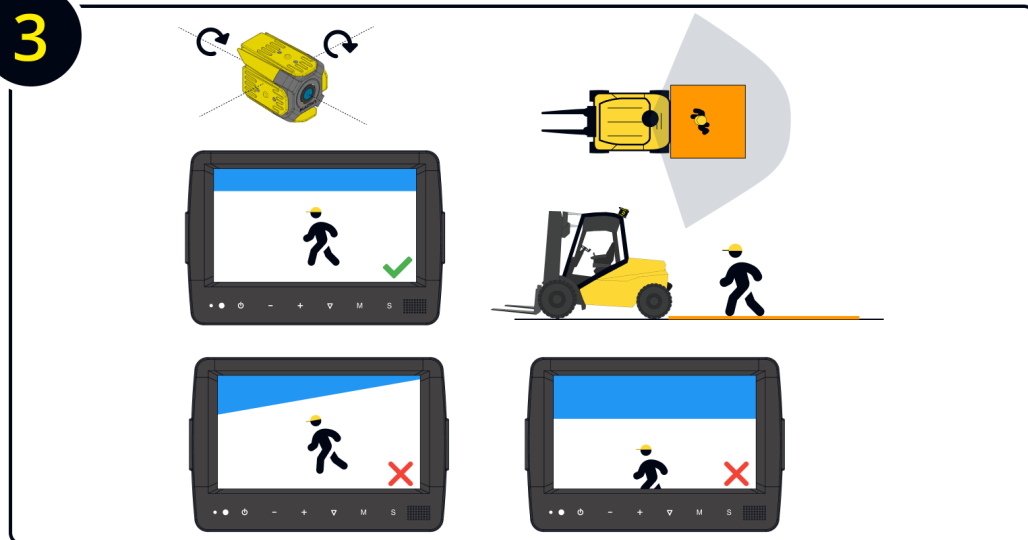

# QUICK START GUIDE

## BLAXTAIR<sup>®</sup> ORIGIN<sup>®</sup>

MR120



MR120A



Blaxtair  
Documentation

**4**

**Configuration**

550421

Enter your password

1	2	3
4	5	6
7	8	9
<	0	>

**5**

**Language**  
Select a language

English

**Unit**  
Select a unit

Meters (m)

**Date / Time**  
Adjust date and time

Year	Month	Day
2021	12	31
Hour	Min	Sec
23	59	59

Step 1/3

**6**

Select your vehicle

Compact Forklift  
Overall length: 2.5 - 3 m  
Overall width: 1 - 1.5 m

Step 2/3

**7**

REAR FRONT

2.0 x 3.0

Step 3/3

**!**

REAR FRONT

Step 3/3

**!**

REAR FRONT

Step 3/3

**i**

REAR FRONT

Step 3/3

**i**

REAR FRONT

Step 3/3

