

QUICK START GUIDE

BLAXTAIR

Voice Buzzer for Blaxtair system
199-210-001



Blaxtair
Documentation

1



299-210-001



105-610-003






499-313-002



499-315-001

2


OUT1  Red
Ground  Black

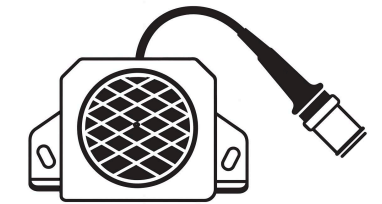

12 to 24vdc Max
0,3A under 12V



3

Output settings

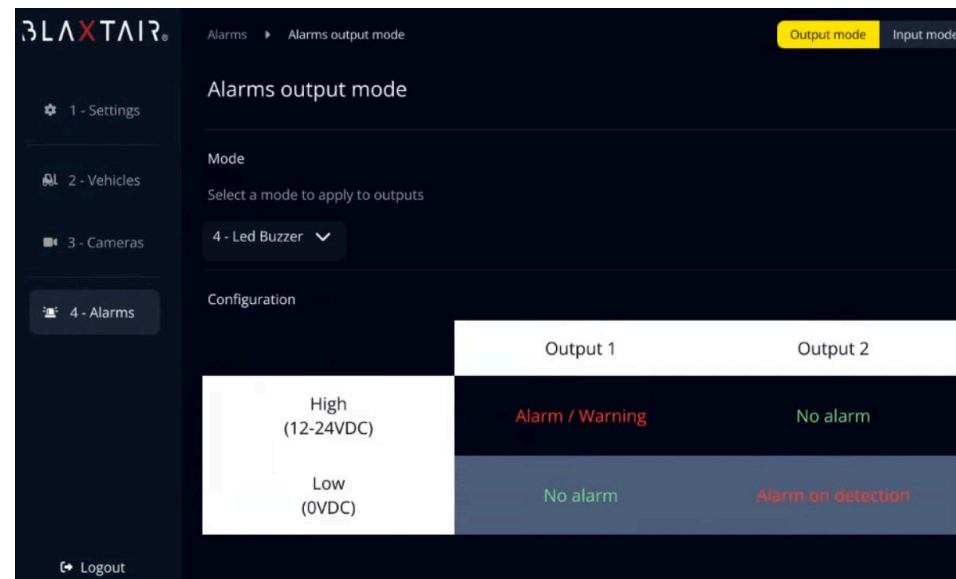


4

Volume adjustment

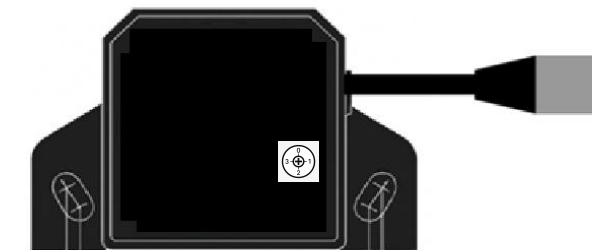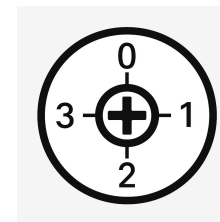

0 1 2 3
25% 50% 75% 100%

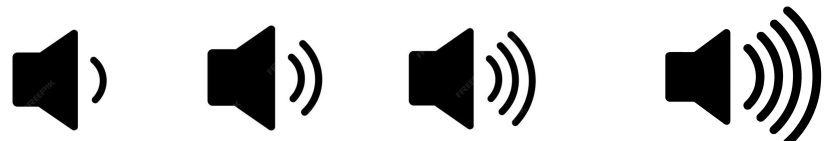

Up to 90dB

399-840-006-1-251208

