

QUICK START GUIDE

BLAXTAIR

Voice Buzzer for Blaxtair system



Blaxtair
Documentation

1



299-210-002



105-610-003




499-313-002




499-315-001

2

OUT1
Ground

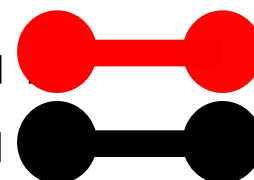


Red
Black

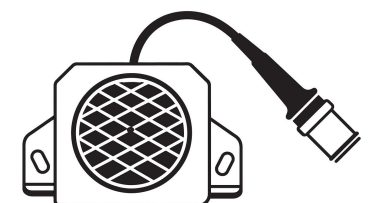

12 to 48vdc Max
0,3A under 12V



3

Output settings

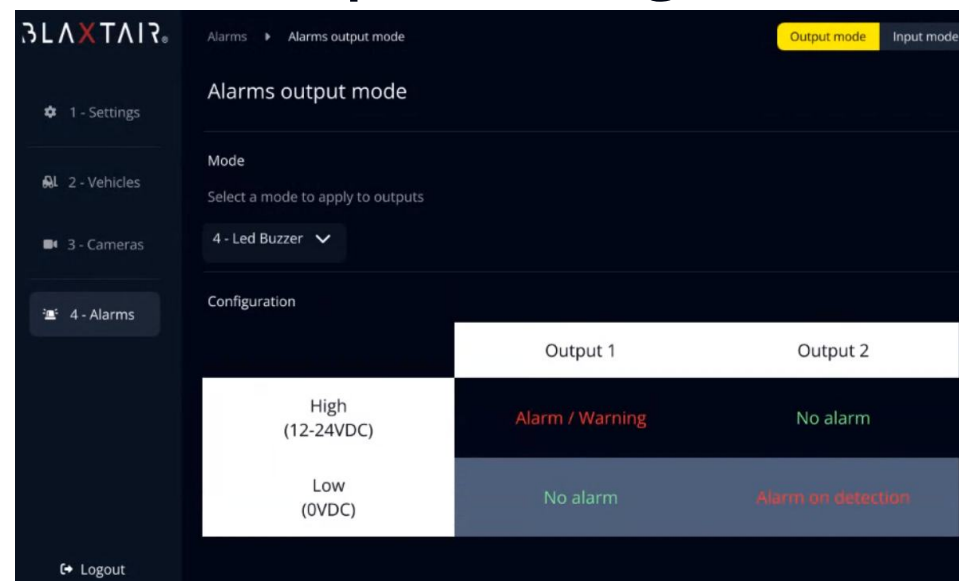


4

Volume adjustment

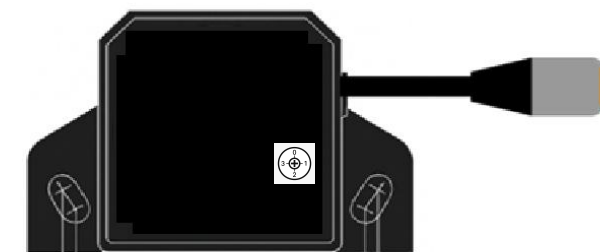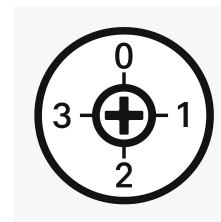

0 1 2 3
25% 50% 75% 100%

Up to 90dB

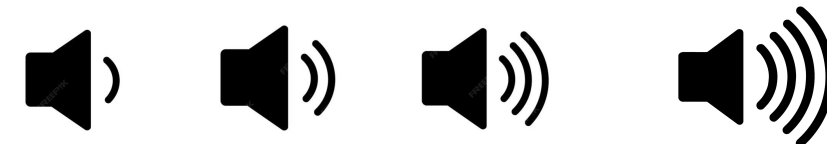

399-840-006-1-251208

